

# DAVIES®

Paint Reinvented

## Recommended Use

- Wood
- Metal
- Masonry
- Plastic
- Fiberglass

## Technical Data

Appearance	:	Light Pink / White
Specific Gravity	:	1.39±0.05
Mixing Ratio	:	2% of hardener to weight of Base
Drying Time @28°C	:	15 ~ 20 minutes
Sanding Time @ 28°	:	30 minutes to 1 hour
Pack Size	:	Available at 1 kg and 4 kg pack
Pot life	:	7 to 8 minutes
Shelf Life	:	Approximately 6 months from date of manufacture. Store in a cool dry place.

### Precaution:

Do not apply **DAVIES® Home Buddy®** when the surface temperature is below 15°C or above 40°C or when the relative humidity exceeds 85%.




## Features:

- ✓ Premium Quality
- ✓ Superior Strength & Flexibility
- ✓ Easy mixing and sanding
- ✓ Fine and smooth finish
- ✓ Impact resistant
- ✓ Very minimal shrinking
- ✓ Finish repairs fast!

**Davies Paints Philippines, Inc.**


1387 Mercedes Ave., San Miguel,  
Pasig City 1600 M.M. Philippines  
+632 8570 7000 • [www.daviespaints.com.ph](http://www.daviespaints.com.ph)



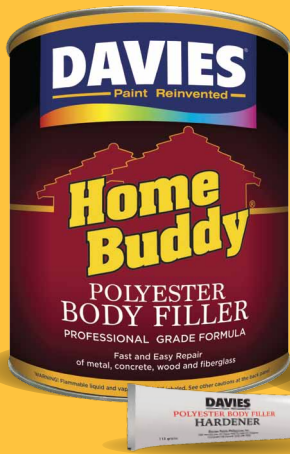

## DAVIES® Home Buddy®

A super strength repair filler to rebuild and repair dry wall, plaster, wood, metal or fiberglass. It offers high build capabilities with excellent adhesion, hardness, flexibility and does not shrink, crack or fallout. It provides durable long-lasting repair works indoors or outdoors.

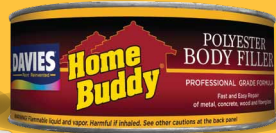

fiber glass

### Application Method:

#### 1. Surface Preparation (on uneven surface)



- Surface must be clean and dry.
- Remove all dirt, grease, oil, wax, paint and dust.
- Sand or grind area using coarse sand paper.

#### 2. Mixing



- Place desired amount of filler on a clean non-porous surface such as glass or metal. Add cream hardener proportionately. Mix thoroughly using putty knife or plastic spreader. Working

time is approximately 2-3 minutes at room temperature 75°- 80°F (27°C).

#### 3. Application



- Use putty knife or spreader in applying thin layer of mixed filler on area or surface.
- Adapt a firm pressure application by wiping motion, to prevent trapping of air bubbles.

• Additional layer of filling is required, slightly above or beyond repair area to allow for sanding.

*Note: Pot life of mixed filler is about 5 minutes at room temperature.*

#### 4. Finishing



- Allow the applied filler to harden approximately 20-30 minutes before sanding to achieve smoothness.

• After the filler has cured for 1 hour at room temperature, apply necessary primer and finish coat as per manufacturer's instructions.



wood



furniture



auto-body